

D340P

At least twice clearer than the 2MP (1080p), 2K+ (5MP) resolution means a lot more information and a wider range. Individuals will be easier to recognize with richer details. This D340P uses only one wire to get a stable network and non-stop powering at the same time. You can also connect it to your pre-existing doorbell wiring. A 15 ° wedge is included for you to adjust its angle. One chime is included for D340P. Just plug it into any electrical socket at any room and be confidently alerted when visitors knock. This camera model will be a top security assistant for you.

1. Specs



1	Lens
2	Button
3	Camera Status Light
4	Chime Status Light



1	Network
2	microSD Card Slot
3	Reset Button
4	Binding Post

2. Setup and Install

Set up the Camera

What's in the Box

Note: The package content may vary and update with different version and platforms, please take the below information only for a reference. And the actual package content are subject to the latest information on the product selling page. D340P



D340P
Reolink Chime



1m Network Cable



Quick Start Guide





Pack of Screws



Mounting Hole Template



Mounting Plate



Wedge



 
Jumper Cables

Set up the Camera on the App

Connection Diagram

Before initial setup, follow the steps below to connect your camera. 1. Connect the camera to a PoE injector with an Ethernet cable.

2. Use the power adapter to power on the PoE injector and connect it to your router.

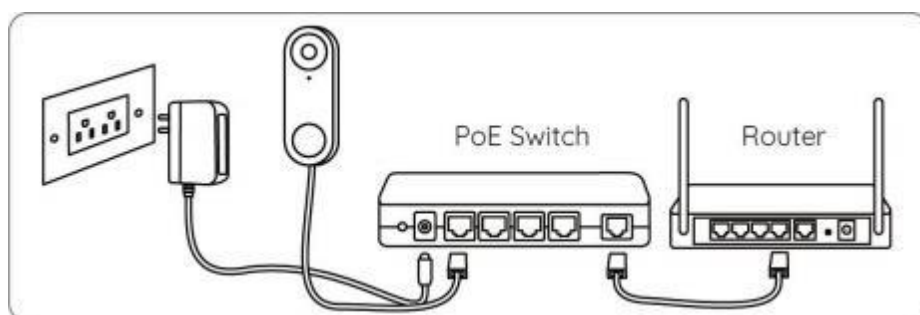


Note: You can power the camera with a PoE switch, PoE injector, Reolink PoE NVR or a DC 12V power adapter (not included in the package).

Set up the Camera on the App

Here is a guide on how to initially set up the camera via Reolink App.

 
Step 1. Tap the icon  in the top right corner.

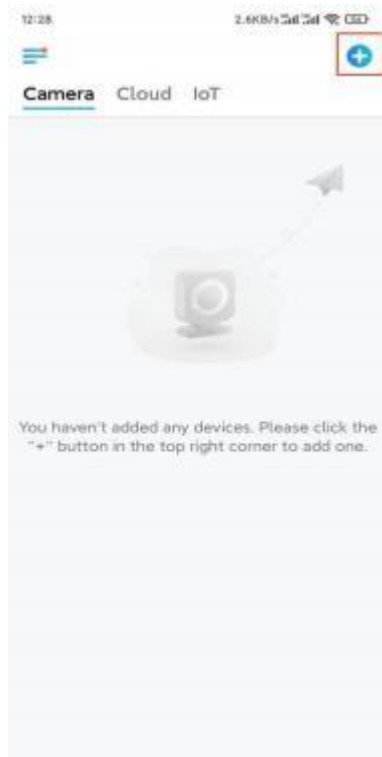

Note: If you've enabled the **Add Device Automatically** option on the App's Settings page, you can tap this device on the **Devices** page and turn to **Step 3** directly.

Step 2. Scan the QR code on the back of the camera. You may tap **Light** to enable a flashlight when setting up the camera in a dark environment.

 
If the phone doesn't respond, please tap **Input UID/IP** and then manually type in the UID (16-digit characters under the QR code of the camera). Then tap **Next**.

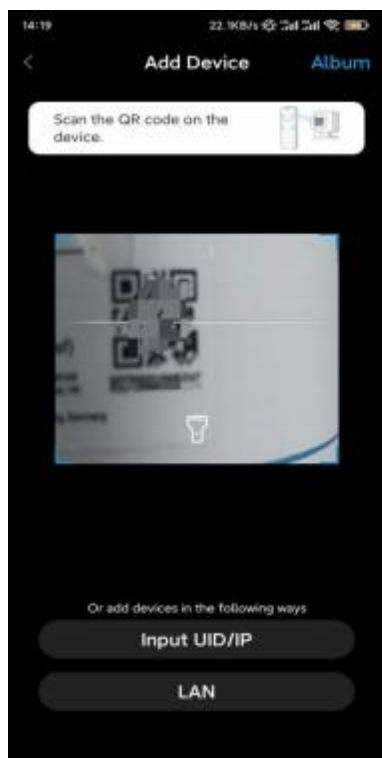


Step 3. Create a login password for your camera. Then tap **Next**.



 Step 4. Name your camera. Then tap **Next**.

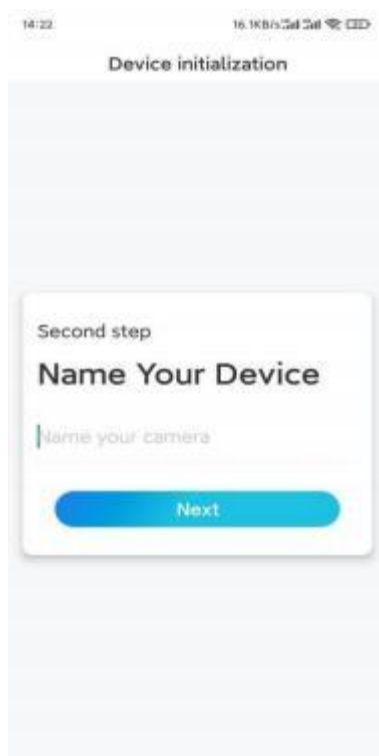

 
Step 5. Initialization finished! You can start live viewing now.

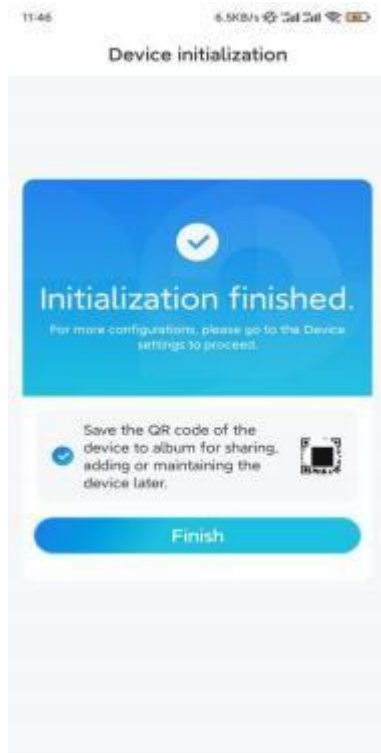

Set up the Chime

Step 1. Plug in the Chime and press the button on your camera.

 
Step 2. Follow the onscreen instructions to finish setup.

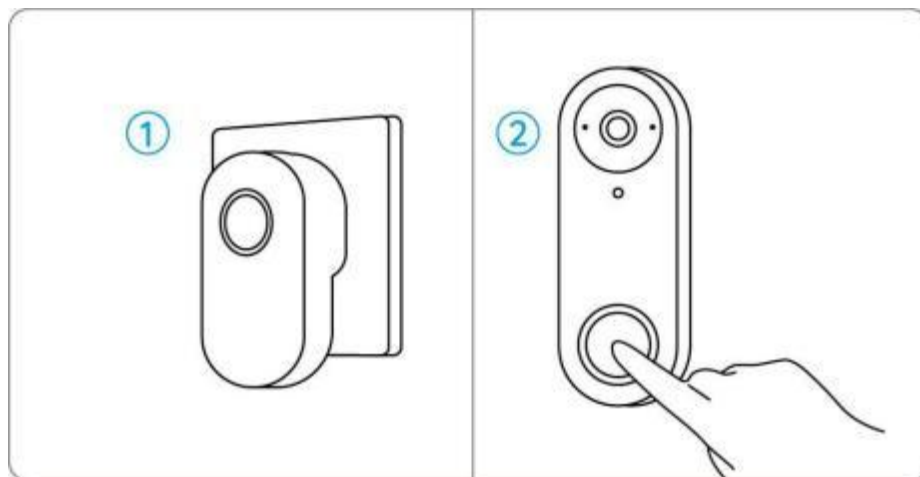


Install the Camera

Please follow the steps below to install the camera.

 Step 1. Put the mounting hole template on the wall and drill holes as shown. **Step 2.** Install the mounting plate using the screws provided through the two holes.

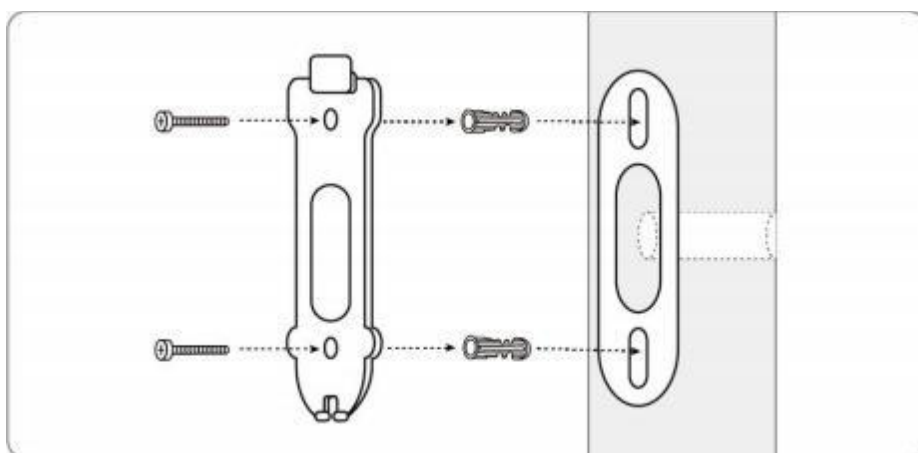

 Step 3. Run the Ethernet cable through the mounting plate and attach the camera to the plate.

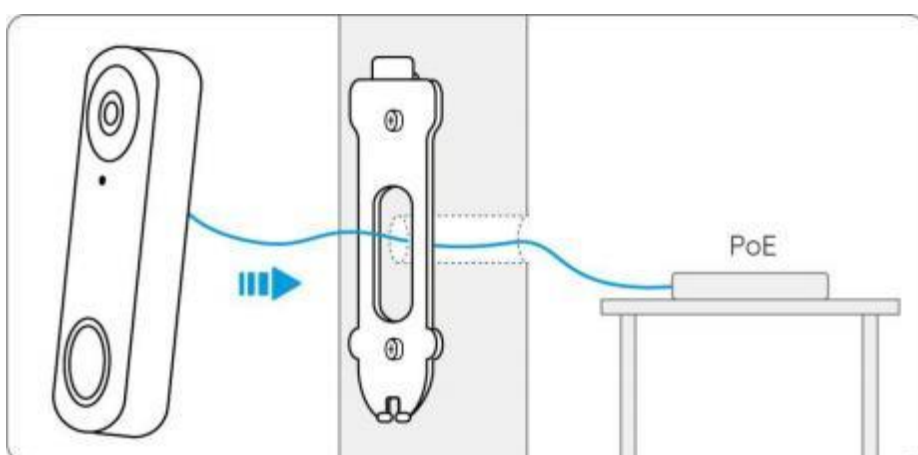

If you need to adjust the angle of the camera, you can use the wedge provided. **Step 1.** Put the mounting hole template on the wall and drill holes as shown.

Step 2. Install the wedge using the screws provided through the two holes. **Step 3.** Screw the mounting plate to the wedge.

Step 4. Run the Ethernet cable through the wedge and mounting plate, and attach the camera to the plate.

